




THE CALM BEFORE AND AFTER THE STORM™

## INSTALLATION INSTRUCTIONS FOR PURE LINE SERIES 7291

1. Turn the main breaker off.
2. Remove panel cover.
3. Knock out proper size hole in the side of the panel as close as possible to the breakers you will be using.
4. The circuit breaker: Use a dedicated three pole 20 amp (max) breaker. (not included)
5. Keep all wires as short and straight as practical.
6. Wire connections:  
White wire to neutral bus bar  
Green wire to box ground  
Black wires to individual poles on breaker.
7. Replace panel cover and switch main breaker to "on" position.
8. Check that active phase indicators (LED's) are glowing green.

3 Ø

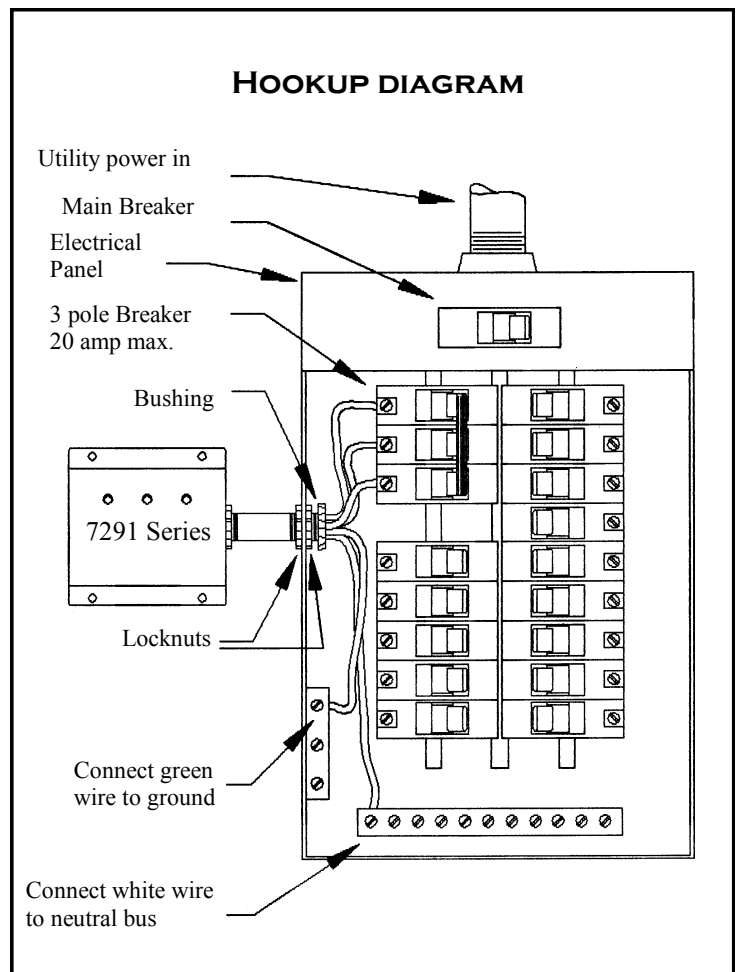

**INSTALLATION SHOULD BE PERFORMED BY A QUALIFIED ELECTRICIAN  
ACCORDING TO THE CANADIAN ELECTRICAL CODE.**

**THIS UNIT PROTECTS ONLY YOUR ELECTRICAL LINES. ADDITIONAL PROTECTORS FOR  
TELCO AND COAXIAL LINE ARE ALSO AVAILABLE FROM WILCAN**

**TOLL FREE PHONE 1-888-596-2020**

[www.lightningtvss.com](http://www.lightningtvss.com)

**E-MAIL:** [wilcan@lightningtvss.com](mailto:wilcan@lightningtvss.com)

[www.powersurges.com](http://www.powersurges.com)