




wilcan
POWERSURGES.COM

THE CALM BEFORE AND AFTER THE STORM™

INSTALLATION INSTRUCTIONS FOR PURE LINE SERIES 8291

1. Turn the main breaker off.
2. Remove panel cover.
3. Knock out proper size hole in the side of the panel as close as possible to the breakers you will be using.
4. The circuit breaker: Use a dedicated double pole 20 amp (max) breaker. (not included)
5. Keep all wires as short and straight as practical.
6. Wire connections:
White wire to neutral bus bar
Green wire to box ground
Black wires to individual poles on breaker.
7. Replace panel cover and switch main breaker to "on" position.
8. Check that active phase indicators (LED's) are glowing red.

1 Ø

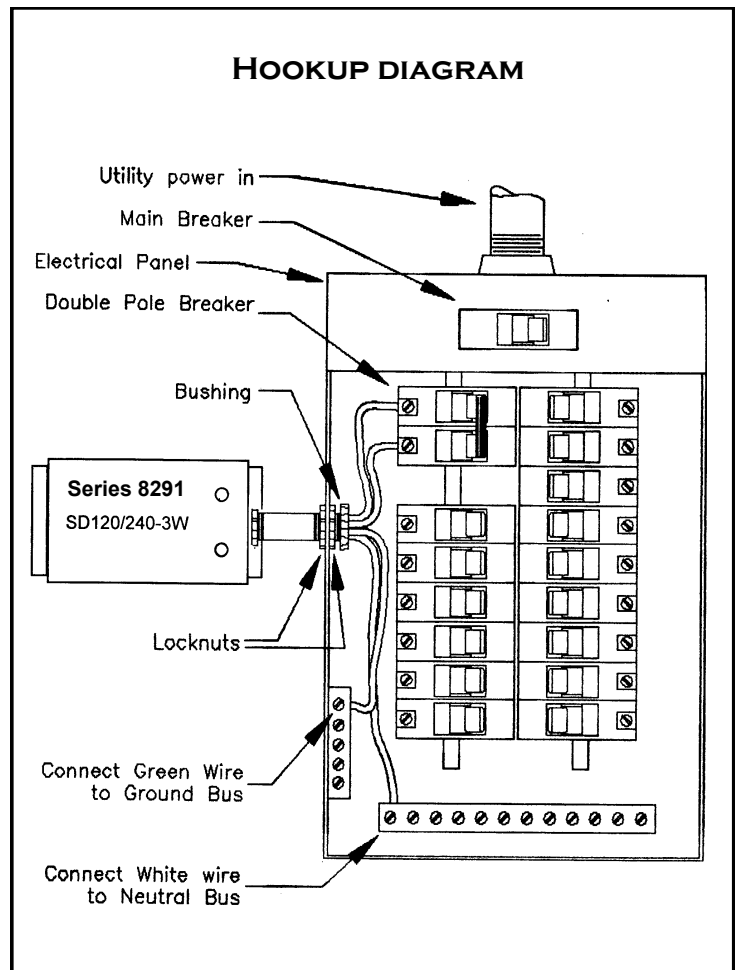

**INSTALLATION SHOULD BE PERFORMED BY A QUALIFIED ELECTRICIAN
ACCORDING TO THE CANADIAN ELECTRICAL CODE.**

**THIS UNIT PROTECTS ONLY YOUR ELECTRICAL LINES. ADDITIONAL PROTECTORS FOR
TELCO AND COAXIAL LINES ARE ALSO AVAILABLE FROM WILCAN**

TOLL FREE PHONE 1-888-596-2020

www.lightningtvss.com

E-MAIL: wilcan@lightningtvss.com

www.powersurges.com