




HIGH PERFORMANCE ELECTRICAL SURGE PROTECTION™

## INSTALLATION INSTRUCTIONS FOR PURE LINE SERIES 8291

1. Turn the main breaker off.
2. Remove panel cover.
3. Knock out proper size hole in the side of the panel as close as possible to the breakers you will be using.
4. The circuit breaker: Use a dedicated three pole 20 amp (max) breaker. (not included)
5. Keep all wires as short and straight as practical.
6. Wire connections:
  - White wire to neutral bus bar
  - Green wire to box ground
  - Black wires to individual poles on breaker.
7. Replace panel cover and switch main breaker to "on" position.
8. Check that active phase indicators (LED's) are glowing red.

3 Ø

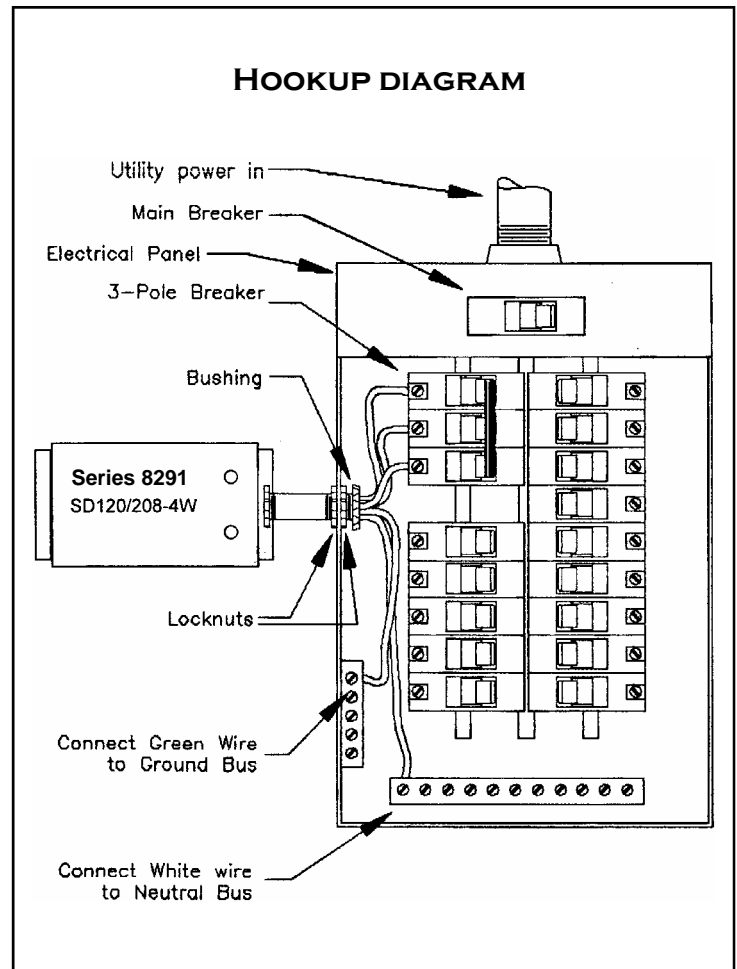

**INSTALLATION SHOULD BE PERFORMED BY A QUALIFIED ELECTRICIAN  
ACCORDING TO THE CANADIAN ELECTRICAL CODE.**

**THIS UNIT PROTECTS ONLY YOUR ELECTRICAL LINES. ADDITIONAL PROTECTORS FOR  
TELCO AND COAXIAL LINE ARE ALSO AVAILABLE FROM WILCAN**

**TOLL FREE PHONE 1-888-596-2020 FAX 1-888-866-7775**

**www.lightningtvss.com  E-MAIL: wilcan@lightningtvss.com  www.powersurges.com**